



**OPERATION INSTRUCTIONS FOR THE AIRFLOW
BREEZE ULTRA WITH REMOTE CONTROL
MODEL SERIES 7.1**

**READ AND SAVE THESE INSTRUCTIONS AND
IMPORTANT NOTICE**

INSTALLATION:


Floor registers 6"x10" or 6"x12"

1. Remove the round cap on the grill top.
2. Route the plug end of the AC adapter through the round opening and plug into the underside of the Ultra.
3. Place round cap with slot on the grill top.
4. Plug the AC adapter into the 120V AC wall outlet.
5. Follow the Operation Settings.
6. Remove the floor register and replace with the Ultra.

Wall or Ceiling registers 6"x10" or 6"x12"

1. Drill (2) holes with a 3/16" drill bit from the bottom side of the Breeze. The holes should be drilled in the pre-molded locations as pictured below.
2. Remove the round cap on the grill top
3. Route the plug end of the AC adapter through the round opening and plug into the underside of the Ultra.
4. Place round cap with slot on the grill top.
5. Plug the AC adapter into the 120V AC wall outlet.
6. Follow the Operation Settings.
7. Remove the wall or ceiling register and replace with the Ultra.

Note: If you choose to hard wire the Ultra, install the necessary 120V AC outlet near the backside of the Ultra then plug into the rear of the unit. Use the non-slotted grill cap to trim out the Ultra top.

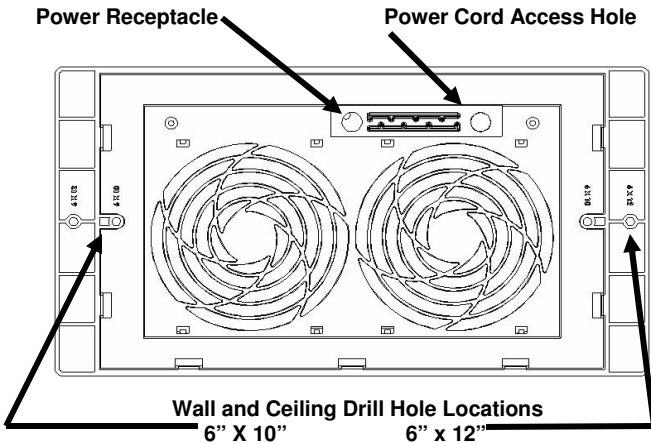


AirFlow Technology, Inc.
1427 W. 86th St. Suite 328
Indianapolis, IN 46260
www.aftproducts.com
(800) 458-5540
(K)

Operation Settings:

Mode Selections:

- FAN (green) for continuous running
- HEAT (red) for automatic ON/OFF to boost warm air
- COOL (blue) for automatic ON/OFF to boost cool air

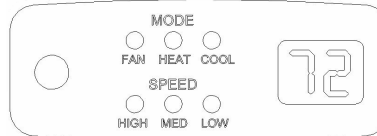


Display shows SET POINT temperature setting for HEAT and COOL

FAN Speed Settings

REMOTE CONTROL INSTRUCTIONS

- Press ON/OFF button to turn Breeze Ultra on.
- Press MODE button for FAN (green) and select fan speed (Suggest HIGH to start.)
- For heating press the MODE button and select HEAT (red). Adjust SET POINT down until fans are on, then adjust SET POINT up until fans turn off. Unit is now set.
- For cooling press MODE button and select COOL (blue). Adjust SET POINT up until fans are on, and then adjust SET POINT down until fans turn off. Unit is now set.
- Return to INSTALLATION directions #6 or #7.

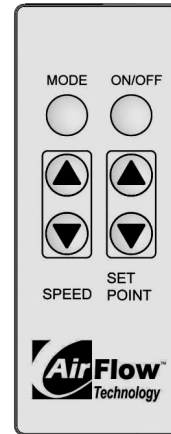

UP



DOWN

IMPORTANT NOTES

1. Fan speed light will flash when fans are running.
2. Fan speed can be set at any time. Fans do not have to be running.
3. Numeric display will go out 30 seconds after SET POINT is completed.
4. The numeric display will only be active in the Heat or Cool mode.
5. The numeric display will come on in Heat or Cool if any button is pressed.
6. The numeric display exhibits an approximate room temperature for the purpose of programming the electronic sensor.
7. To shorten the length of time your Breeze Ultra runs after your forced air furnace or air conditioner has shut off
 - a. for HEAT raise the SET POINT temperature
 - b. for COOL lower the SET POINT temperature
8. If power fails or the Breeze Ultra is turned off the Ultra will automatically retain all settings.